## Netgear D6300

- Establish a connection between the device and the router via network cable or Wi-Fi (If wifi is protected by a password you have to check label on the bottom of modem)
- Open your web browser and type the default IP Address 192.168.0.1 in the address bar
- You will be prompted to enter Username: admin and Password: password
- In case the modem is not configured yet you will be redirected to wizard
- Select No, I want to configure the internet connection myself and click Next

NETGEAR <sup>®</sup>	genie <sup></sup>
c Y	Configuring the Internet Connection
D	o you want NETGEAR Genie to help?
	<ul> <li>No, I want to configure the internet connection myself.</li> <li>I have saved the router settings in a file and I want to restore the router to those settings.</li> </ul>
	Next

- Under the Basic Tab, click on Internet
- Select Yes for the "Does your internet connection requires a login?
- For PPPoE type of DSL service, click the drop-down arrow under the Internet Service Provider and select PPPoE
- Type ADSL Username and Password and make sure Connection Mode is Always On then click Apply

5300	Jenne	Firmwar V1.0.0
BASIC	ADVANCED	Englis
me 🕨	Internet Setup	_
ernet 🕨 🕨	Apply ► XCar	ncel Test 🕨
eless 🕨		
ached Devices	Does your Internet connection require a login?	
antal Controls	• Yes	
ental controls	) No	
ady SHARE		
Guest Network	Internet Service Provider	PPPoE
	Login	username@isp.net
	Password	password
	Service Name (If Required)	
	Connection Mode	Always On
	Idle Timeout(In Minutes)	Always On
		Dial on Demand Manually Connect
	Get Dynamically from ISP	
	Use Static IP Address	192 . 168 . 24 . 48
	Domain Name Server (DNS) Address	
	Get Automatically from ISP	
	Primary DNS	
	Secondary DNS	

- Under the Advanced Tab, click Setup and in the drop down list select ADSL settings
- Select LLC BASED as Multiplexing Method
- Type VPI and VCI, VPI should be 0 in case DSP is Ogero and 8 in case DSP is GDS while VCI should be 35
- Keep Auto DSL Mode selected then click Apply

BASIC	ADVANCED	Engli
ADVANCED Home	ADSL Settings	
Setup Wizard	Multiplexing Method	
WPS Wizard	VPI	
• Setup	) VCI	35
Internet Setup	DSL Mode	Auto 🔻 <
ADSL Settings		
wireless setup	3	Apply Cancel
WAN Setup		$\Delta$
LAN Setup		
QoS Setup		
Guest Network		
USB Storage	)	
Security	)	
Administration		

- To configure Wireless Settings 2.4GHz and 5GHz , go to Wireless Setup
- In Name(SSID ) type wireless Name
- Select WPA-PSK(TKIP)+WPA2-PSK(AES) as Security Option and in Passphrase type wireless password for both 2.4GHz and 5GHz then click Apply (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

NETGEAR GE	nie	Ecopout Firmware Version V1.0.15_1.0.16
BASIC	ADVANCED	English 👤
ADVANCED Home	Wireless Setup	
Setup Wizard		Apply IP XCancel
• Setup	Region Selection	$\Delta$
Internet Setup	Region: Australia	
ADSL Settings Wireless Setup	Wireless Network (2.4GHz big/n)	
WAN Setup	Enable SSID Broadcast	
QoS Setup	Name (SSID): Channel:	Auto
Guest Network	Mode:	Up to 300 Mbps 💌
• USB Storage	Security Options	
Security	C None	
Administration	C WPAPSK [AES]	
Advanced Setup	WPA-PSK [TKIP] + WPA2-PSK [AES]	
	Passphrase:	(8-63 characters or 64 hex digits)
	Wireless Network (5GHz a/n/ac)	
	I Enable SSID Broadcast	
	Name (SSID):	
	Mode:	Up to 1300 Mbps
	Security Options	
	WPA2-PSK (AES)	
	* WPA-PSK [TKIP] + WPA2-PSK [AES]	
	Passphrase:	(8-63 charaders or 64 hex digits)
	Help Center	Showifide Holp Center