Huawei EchoLife-HG521

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.1 in the address bar
- You will be prompted to enter Username: admin and Password: admin

HUAWEI	EchoLife Home Gateway				
	Username: admin Username: admin Password: admin Please enter your username and password. Please username and password. Cancel				

- Expand Basic then click WLAN and make sure WLAN is enabled
- In SSID textbox type wireless name and make sure SSID is enabled
- Select WPA2-PSK as Security mode and in WPA Pre-Shared Key type wireless password then click Submit (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

HUAWEI	EchoLife Home Gateway		P Hel	p 🕩 Logout	HUAWEI
	Basic > WLAN > WLAN	ic > WLAN > WLAN			
	WLAN WLAN Filte	ering			
🕐 Status	Enable WLAN				
Basic	Wireless Settings			Help	
WAN	Mode:	802.11b/g/n 🗸			
LAN	Country:	GREECE	~		
WLAN	Channel:	Auto	~		
DSL	Rate:	Auto	~		
	Transmit power:	20	dBm (1-20 dBm)*		
Advanced	SSID index:	SSID1	~		
(h)	SSID:	HUAWEI	$\cdot \langle \neg \rangle$		
Maintenance	Maximum number of accessing devices:	32	*		
	SSID:	Enable			
	Hide broadcast:	Enable			
	AP isolation:	Enable			
	11N Band Width	20/40	✓ MHZ		
	11N Guard Interval	long	\sim		
	Security:	WPA2-PSK	<u>⊻ <</u> ⊐ .		
	WPA Pre-Shared Key:	******			
	WPA Encryption:	AES		V	
				Submit	