## Justec JDR454WV4

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open a browser and type 192.168.1.1 in the address bar
- You will be prompted to enter Username: admin and Password: 1234

Connect to 192.168.1.1				
	G B			
TrendChip ADSL Router				
User name:	🔮 admin 💌			
Password:	••••			
	Remember my password			
	OK Cancel			

- To modify Wireless settings, go to Interface Setup then click Wireless from the submenu
- Make sure Access Point is activated then in SSID textbox type Wi-Fi Name
- Make sure Broadcast SSID is enabled and Select WPA-PSK or WPA2-PSK as Authentication Type
- In Pre-Shared Key type wireless password (safest passwords are long and contain at least 8 digits of mixed letters, number)

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	
		LAN	Wireless				
Wireless LAN	Wireless LAN						
	Access Point : SSID :		:      Activated     JDR454VVV4	O Deactivated 🥌			
		Broadcast SSID Channel ID	<ul> <li>Yes N</li> <li>Channel06 243</li> </ul>	o 7MHz 💌			
WPA-PSK	Authentication Type : WPA-PSK M C						
	Encryption : Pre-Shared Key :		: TKIP 😭		(8	3∼64 characters)	

• Scroll down to click Save

Advanced Setting		
	Beacon Interval :	100 (range: 20~1000)
	RTS/CTS Threshold :	2347 (range: 1500~2347)
	Fragmentation Threshold :	2346 (range: 256~2346, even numbers only)
	DTIM :	3 (range: 1~255)
	802.11 b/g :	802.11b+g 😪
Wireless MAC Address		
Filter	flictive :	
	Active : O Activated 💿 Deactivated	
	Action : Allow Association 🍸 the follow Wirless LAN station(s) as:	
	Mac Address #1 :	00: 00: 00: 00: 00: 00
	Mac Address #2 :	00:00:00:00:00
	Mac Address #3 :	00:00:00:00:00
	Mac Address #4 :	00:00:00:00:00
	Mac Address #5 :	00:00:00:00:00
	Mac Address #6 :	00:00:00:00:00:00
	Mac Address #7 :	00:00:00:00:00:00
	Mac Address #8 :	00:00:00:00:00:00
		SAVE CANCEL