Linksys X-series

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.1 in the address bar



 Once the login prompt appears, type "admin" in the Username and Password fields then click OK

	8.1.1
Linksys X1	000
Username:	admin
Password:	admin
	Login

- Click Wireless tab, then click Basic wireless settings
- Select Manual setup then type in the Network Name (SSID) desired WIFI name and click Save Settings

uluilu cisco							Firmware	e Version: v1.0.00
							Linksys X1000	X1000
Wireless	Setup	Wireless	Security	Access Policy	Applications & Gaming		Administration	Status
	Basic Wirele	ess Settings	Wirele	ess Security	Guest Access	1	Wireless MAC Filt	er
Configuration View	Manu	ual OWI-FiPr	otected Setup™	•			<u>Help</u>	
	Network	Name (SSID):	Ciscol	10044	7			
	Channel	Width:	20 MH	z Only	•			
	Standard	Channel:	Auto	~	_			
	SSID Bro	adcast:	🔘 Ena	bled Obisabled				
					_			
				Save Settings	Cancel Changes			

- Make sure to connect your device to new WIFI Name and Click the **Wireless** tab, then click the **Wireless Security sub-tab**
- Select WPA2 Personal to be a Security Mode
- In **Passphrase** textbox enter WIFI password and safest passwords are long and contain at least 8 digits of mixed letters, numbers, and symbols
- Once your changes are done, click Save Settings

uluilu cisco.				Firmware	Version: v1.0.00
				Linksys X1000	X1000
Wireless	Setup Wireless	Security Access Policy	Applications & Gaming	Administration	Status
	Basic Wireless Settings	Wireless Security	Guest Access	Wireless MAC Filte	er
Wireless Security	Security Mode:	WPA2 Personal	V	<u>Help</u>	
	Passphrase]		
		Pour Patting	Correct Channes		