Netgear D6300

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.0.1 in the address bar
- You will be prompted to enter Username: admin and Password: password

D6300 × +	
← → C (Q http://192168.0.1	
Netgea	r D6300
Username:	admin
Password:	password
Password:	Login

- You can change wireless settings using Basic or Advanced Mode
- To configure Wireless Settings using Basic Mode
 - Under the Basic Tab, click on Wireless
 - In Name(SSID) type wireless Name
 - Select WPA-PSK(TKIP)+WPA2-PSK(AES) as Security Option and in Passphrase type wireless password then click Apply (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

NETGEA	e de	nie ⁻	Logout
R6300	. 9-		Firmware Version V1.0.2.36 1.0.28
BASIC		ADVANCED	English
Home	•)	Wireless Setup	
Internet	•)	Apply > X Cancel	
Wireless			
Attached Devices	•)	Region Selection	
Parental Controls	•)	Region: Europe	
ReadySHARE	• 1	Wireless Network (2.4GHz b/g/n)	
Guest Network	•)	Channel: Mode: Up to 450 Mbps	
		Security Options None WPA-PSK [TKIP] WPA2-PSK [AES] WPA-PSK [TKIP] + WPA2-PSK [AES]	
		Passphrase: purplelake278 (8-63 characters or 64 hex digits)	
		Wireless Network (5GHz a/n/ac) Enable Wireless Isolation Ecode SSID Broadcast	
		Help Center	Show/Hide Help Center

- To configure Wireless Settings 2.4GHz and 5GHz using Advanced Mode
 - \circ ~ Click Advanced and Expand Setup then click Wireless Setup
 - In Name(SSID) type wireless Name
 - Select WPA-PSK(TKIP)+WPA2-PSK(AES) as Security Option and in Passphrase type wireless password for both 2.4GHz and 5GHz then click Apply (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

NETGEAR GE	nie -	Logout are Version 0.16 1.0.16
BASIC	ADVANCED	sh ַ
ADVANCED Home	Wireless Solup	
Setup Wizard	Apply > XCanteel	
WPS Wizard		-
• Setup	Region Selection	
Internet Setup	Region: Australia	_
ADSL Settings	Wireless Hetwork (2.4GHz bigm)	
Wireless Setup	Enable Wireless Isolation	
WAN Setup	₩ Enable SSID Broadcast	
LAN Setup	Name (SSID):	
QOS SERUP Guast Natwork	Channel: Auto -	
GUEST NELWORK	Mode: Up to 300 Mbps -	
USB Storage	Security Options	
Security	C None	
• Administration	C WPA-PSK [TKP]	
Administration	C WP42-PSK (AES)	
Advanced Setup	© WPA-PSK [TKIP] + WPA-PSK [AES]	
	Passphrase: (8-63 characters or 64 her digits)	
	Wireless Network (SGHz abulac)	
	Enable Wireless Isolation	
	✓ Enable SSID Broadcast	
	Name (SSID):	
	Channel: 36 -	
	Mode: Up to 1300 Mbps •	
	Security Options	
	C None	
	⊂ WPA2-PSK [AES]	
	• WPA-PSK [TKIP] • WPA2-PSK [AES]	
	Passphrase: (8-63 charaders or 64 her digits)	
	O Help Conter ShowHide He	sip Center