Netgear DGND3700

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.0.1 in the address bar
- You will be prompted to enter Username: admin and Password: password

http://192.168.0.1		
	R	GER
	User name:	😰 admin 💌
	Password:	t⊻ admin ✓
		Remember my password
		OK Cancel

- To configure Wireless Settings go to Wireless Settings on the left then in Name(SSID) textbox type wireless name
- Make sure Enable Wireless Access Point is selected then choose WPA-PSK+WPA2-PSK as Security Option
- In Passphrase type wireless password (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

WPA2-PSK (AES) Setup Wizard	Wirel	ess Sett	ings					-	
Add WPS Client	Region	Selection						- 1	
Setup	Region Selection Region: Europe								
 Basic Settings 	I —							- 1	
ADSL Settings	Select the wireless network to configure (2.4GHz b/g/n)								
Wireless Settings		Profile	SSID	Guest Network	Security	Enable	Broadcast SSID	-	
USB Storage		Primary	NETGEAR	No	None	Yes	Yes	4	
 Basic Settings 		2	NETGEAR-2	Yes	None	No	Yes	4	
Advanced Settings		3	NETGEAR-3	Yes	None	No	Yes	4	
Media Server		4	NETGEAR-4	Yes	None	No	Yes	1	
Content Filtering	Wirel	ase Natwor							
Logs		Wireless Network (2.4GHz b/g/n) Name (SSID):							
Block Sites	Name (SSID): NETGEAR								
 Port Forwarding / Port Triggering 	Mode: Up to 145 Mbps ♥								
Block Services	Enable this wireless Network								
Schedule	✓ Enable SSID Broadcast								
• E-mail	Wireless Isolation								
Maintenance	Security	ity Ontion	Drofile 4					- 1	
Router Status	Security Options - Profile 1								
Attached Devices		one /PA-PSK(TI							
Backup Settings			AES)						
Set Password			KIP) + WPA2-PSK (AES)						
		IFA-FOR (I	NF) + WFA2-PSK (AES)						
Diagnostics									
Router Upgrade	I —							- 1	
Advanced	Security Options (WPA2-PSK)								
Wireless Settings									
 Wireless Repeating Function 	Vireless Repeating Function Select the wireless network to configure (5GHz a/n)								
- WAN Setup		Profile	SSID	Guest Network	Security	Enable	Broadcast SSID	1	

- Scroll Down to configure 5GHZ Wireless Network
- Make sure Enable Wireless Access Point is selected
- Repeat the same steps concerning Name(SSID), Security Option , and Passphrase then click Apply to Save configuration

USB Storage	Salaci	the wire	less network to configure (50						
 Basic Settings 	Jeleci	Profile	SSID	Guest Network	Security	Enable	Broadcast SSID		
Advanced Settings		Primary	NETGEAR-5G	No	None	Yes	Yes		
Media Server		2	NETGEAR-5G-2	Yes	None	No	Yes		
Content Filtering	0	3	NETGEAR-5G-3	Yes	None	No	Yes		
Logs	0	4	NETGEAR-5G-4	Yes	None	No	Yes		
Block Sites	ites								
Port Forwarding / Port Triggering	Wireless Network (5GHz a/n) Name (SSID): NETGEAR-5G								
Block Services	Chann	Channel: 36 V							
Schedule	Mode:			Up to	o 300 Mbps 🗸				
E-mail	🗾 🗹 En	able this	wireless Network						
Maintenance	🗾 🗹 En	C Enable SSID Broadcast							
Router Status	Wireless Isolation								
Attached Devices	Security Ontione Brofile 1								
Backup Settings	Security Options - Profile 1								
Set Password									
Diagnostics		○ WPA-PSK(TKIP) ● WPA2-PSK (AES) ◆							
Router Upgrade		WPA2-P3K (AE3)							
Advanced									
Wireless Settings									
Wireless Repeating Function	Secur	ity Optio	ns (WPA2-PSK)						
WAN Setup	Passphrase: (8-63 characters)								
Dynamic DNS									
LAN Setup									
QoS Setup		Л							
Remote	<u> </u>	V							
Management		Apply Cancel							
Static Routes									