Prolink H5004NK & PRS1241B

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open a browser and type 192.168.1.1 in the address bar
- You will be prompted to enter Username: admin and Password: admin or password

k access, place your bookmarks here on the bookmarks bar, an	An Available non-		
	ADSL R	uter Login	
	User Name: admin Password: passwo	rd	
	Login	Reset	

- Click Setup then expand WLAN
- Click on Basic and make sure Disable Wireless LAN Interface option is not selected
- In SSID textbox type the Name of Wireless and click Apply Changes
- You may need to connect your device again to new Wi-Fi Name using old password

	Advanced	Service	Firewall	Maintenance	Logout		
Û	Wireless Basi This page is used to	c Settings o configure the parame	eters for your wireless n	ietwork.			
_	Disable Wir	eless LAN Interface					
Basic Band:			2.4 GHz (B+G+N)				
	Mode:		AP	AP 🗸			
> MBSSID		SSID:					
ol List							
	Channel Width:		40MHZ				
	Control Sideband:		Upper	Upper			
	Channel Number: 11 Current Channel: 11						
	Radio Power (Percent):		100%	100%			
	Associated Clie	ents:	Show A	Show Active Clients			
	DI List	Wireless Basi This page is used to Disable Wir Band: Mode: SSID: DI List Channel Width: Control Sideba	Wireless Basic Settings This page is used to configure the parame Disable Wireless LAN Interface Band: Mode: SSID: DI List Channel Width: Control Sideband: Channel Number: Radio Power (Percent):	Wireless Basic Settings This page is used to configure the parameters for your wireless r Disable Wireless LAN Interface Band: 2.4 GHz Mode: SSID: of List Channel Width: 40MHZ Control Sideband: Upper Channel Number: 11 Radio Power (Percent):	Wireless Basic Settings This page is used to configure the parameters for your wireless network. Disable Wireless LAN Interface Band: 2.4 GHz (B+G+N) ▼ Mode: SSID: Channel Width: 40MHZ ▼ Control Sideband: Upper ▼ Channel Number: 11 ▼ Current Channel: 11 Radio Power (Percent):	Wireless Basic Settings This page is used to configure the parameters for your wireless network. Disable Wireless LAN Interface Band: AP SSID: Channel Width: 40MHZ Control Sideband: Upper Channel Number: 1 Channel Number: 1 00%	

- Click Security and make sure SSID TYPE is Root
- Select WPA2(AES) or WPA2(TKIP) as Encryption
- Choose Personal(Pre-Shared Key) as WPA Authentication Mode
- Select Passphrase as Pre-Shared Key Format
- In Pre-Shared Key textbox type wireless password then click Apply Changes (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

Status	Battija	Advanced	Service	Firewall	Maintenance	Logout			
IAN		Wireless Secu This page allows yo access to your wire	urity Setup buisetup the wireless less network.	security, Tüm on WEP	or WPA by using Encryption K	eys could prevent any	unauthorized		
VLAN	> WLAN		SSID TYPE:		● Root ○ VAP0 ○ VAP1 ○ VAP2 ○ VAP3				
> Basic		Encryption:	VPA2(AES)	Set WEP Key					
> Security	> Security		Use 802.1x Authentication						
> MBSSID		WPA Authentication Mode: Canterprise (RADIUS) Personal (Pre-Shared Key)							
> Access Contr	ol List	Pre-Shared Key	Format:	Passphrase					
> WPS		Pre-Shared Key	<i>r</i> :	*****		3			
		Authentication	RADIUS Server:	Port 1812 IP a	address 0.0.0.0 Pa	assword]		
		Note: When enc	ryption WEP is sele	cted, you must set WEP	key value.				
		Apply Changes	-						
		Apply changes					6		