

How to Change Wi-Fi network name (SSID) and the Password:

• For DSL Users:


- 1. Technicolor V1 /Thomson:
- connect to the WiFi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.254)
- Click on home network→WLAN:

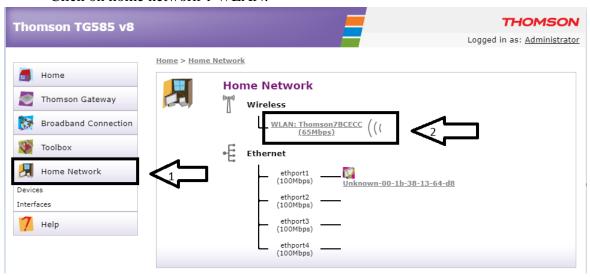

- Configure:

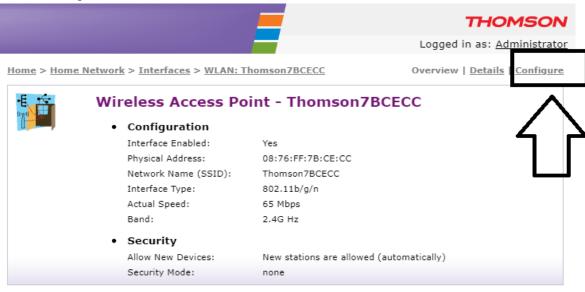

- Network Name
- Encryption Key

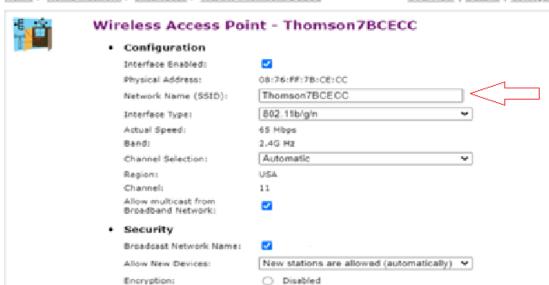

2. Technicolor V2:


- connect to the WiFi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.1)

Use WEP Encryption

- Username : admin / Password : access key on the back of the modem




- press on wireless and change WiFi network name (SSID) and the Password :

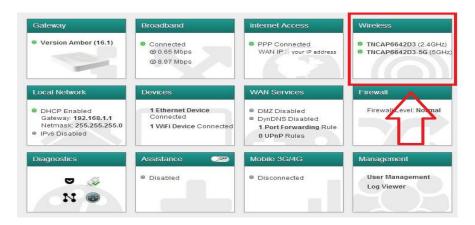

3. LinkSys

- connect to the WiFi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.1)
- Username : admin / admin : access key on the back of the modem
- Wireless (Basic Wireless Setting): to change the Wi-Fi Name

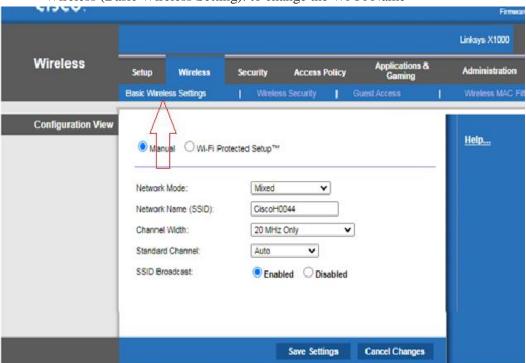


- Wireless (Wireless Security): to change Wi-Fi Password




4. Linksys

- connect to the Wi-Fi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.1)
- Username : admin / admin : access key on the back of the modem

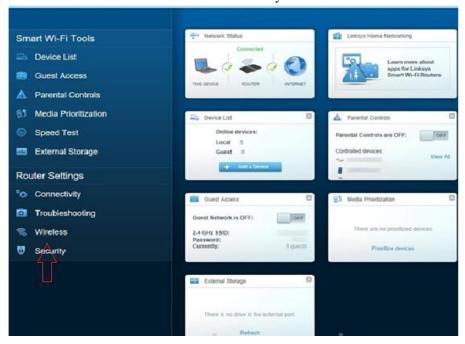


- Wireless→Edit→ Change the

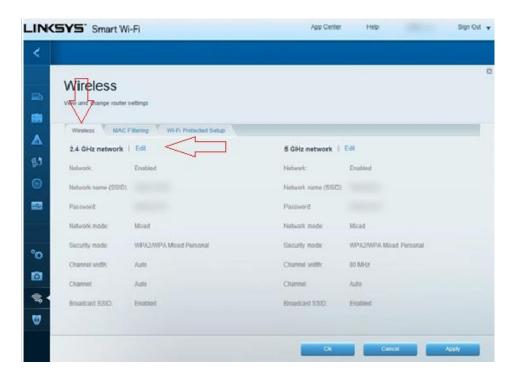

5. D-Link

- connect to the Wi-Fi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.1)
- Username : admin / admin : access key on the back of the modem

-

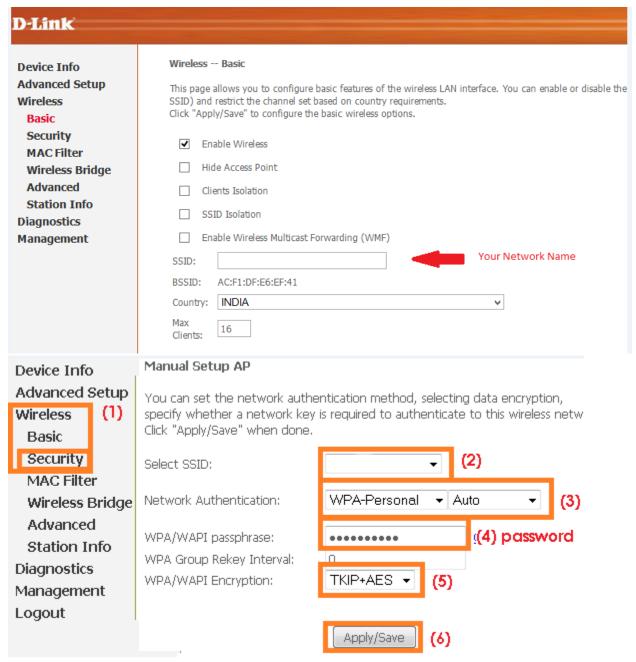

6. Tp-Link

- connect to the Wi-Fi network of your modem
- Open any browser, and enter the gateway address (the default one is 192.168.1.1)
- Username : admin / admin : access key on the back of the modem

