


## Dlink DSL-2877AL


- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.1 in the address bar
- You will be prompted to enter username and password , Username should be admin and password : admin then click login

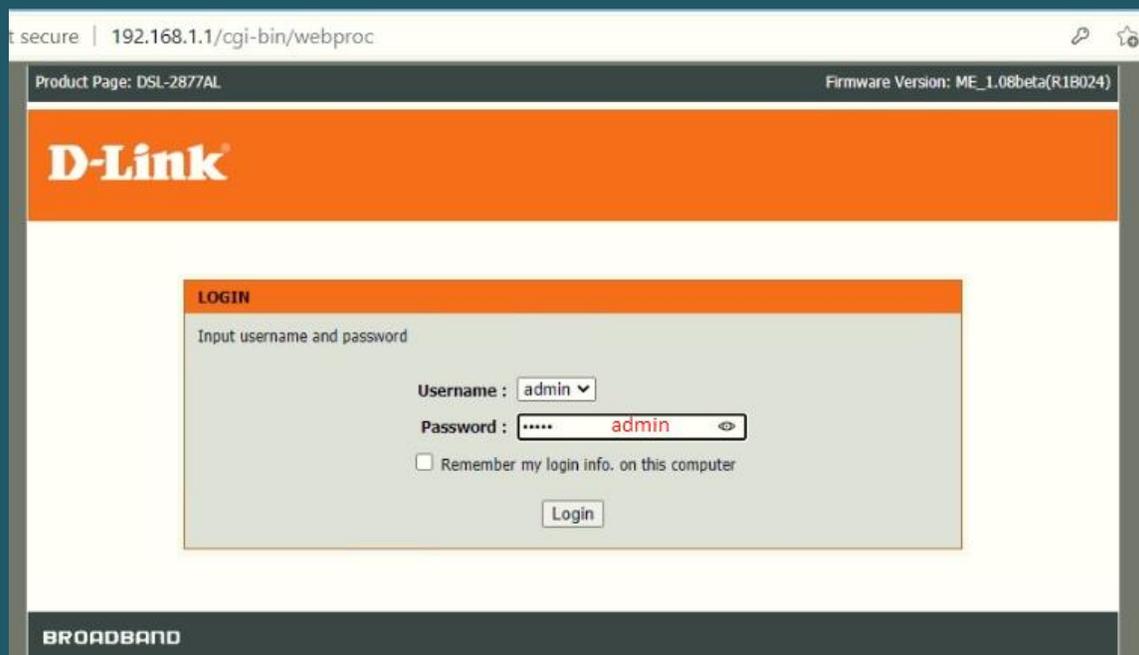

- After logging in, click on the Setup menu link at the top, and then click on the 2.4G Wireless or 5G Wireless menu link on the left.
- Click Wireless Basic to modify wireless name or channel



- In SSID textbox, enter a name for your wireless network then click Apply to save settings

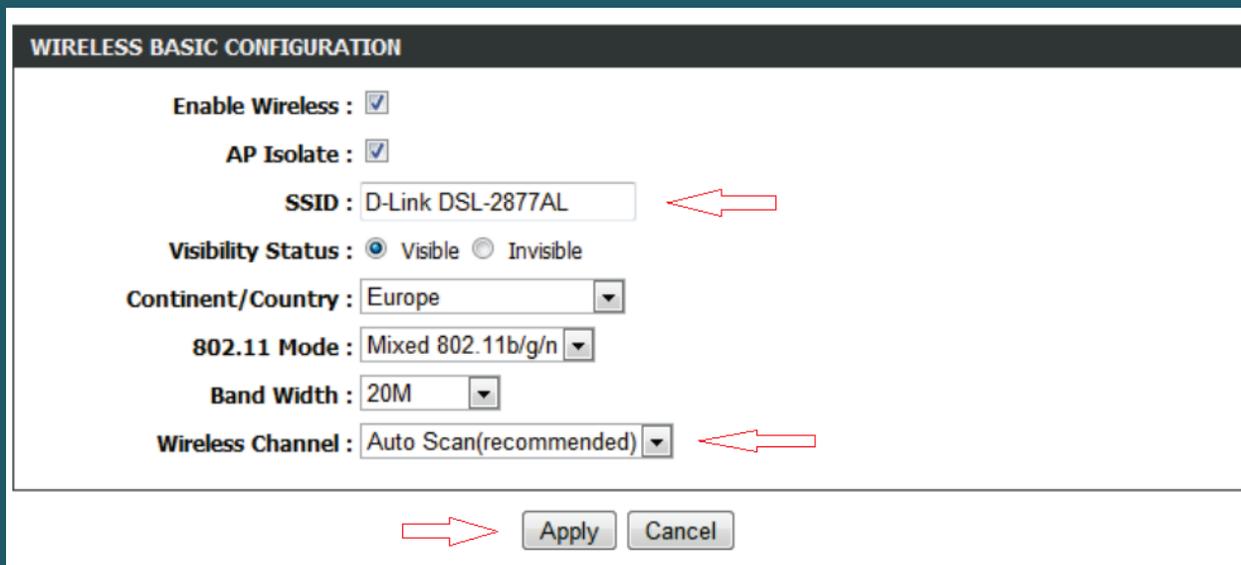

- Click wireless security to modify wireless password



- Make sure WPA2 only is selected as Wireless security mode and WPA mode is Personal
- In Pre-Shared Key textbox type the password (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)
- Click Apply to save changes

**WIRELESS SECURITY MODE**

Wireless Security Mode : WPA2 only 

---

**WPA2 ONLY**

WPA Mode : Personal 

Encryption Mode : AES

Group Key Update Interval : 100 (60 - 65535)

---

**PRE-SHARED KEY**

Pre-Shared Key : 123456789 (ASCII < 64, HEX = 64) 

