

Netgear DG834G

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.0.1 in the address bar
- You will be prompted to enter Username: admin and Password: password



- To configure Wireless Settings go to Wireless Settings under Setup then in Name(SSID) textbox type wireless name
- Make sure Enable Wireless Access Point is selected then choose WPA-PSK+WPA2-PSK as Security Option
- In Passphrase type wireless password then click Apply (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)



- Setup Wizard
- Add WPS Client
- Setup
 - Basic Settings
 - ADSL Settings
 - **Wireless Settings**
 - Content Filtering
- Logs
 - Block Sites
 - Firewall Rules
 - Services
 - Schedule
 - E-mail
- Maintenance
 - Router Status
 - Attached Devices
 - Backup Settings
 - Set Password
 - Diagnostics
 - Router Upgrade
- Advanced
 - WAN Setup
 - Dynamic DNS
 - LAN IP Setup
 - Wireless Settings
 - QoS Setup
 - Remote Management

Wireless Settings

Wireless Network

Name (SSID): ←

Region: ▼

Channel: ▼

Mode: ▼

Wireless Access Point

Enable Wireless Access Point ←

Allow Broadcast of Name (SSID)

Wireless Isolation

Wireless Station Access List

Security Options

Disable

WEP (Wired Equivalent Privacy)

WPA-PSK (Wi-Fi Protected Access Pre-Shared Key)

WPA2-PSK(Wi-Fi Protected Access 2 with Pre-Shared Key)

WPA-PSK+WPA2-PSK ←

WPA-802.1x

WPA2-802.1x

WPA-802.1x+WPA2-802.1x

Security Options (WPA-PSK + WPA2-PSK)

Passphrase: (8-63 characters) ←