



## TP-Link Archer D Series

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.1 in the address bar

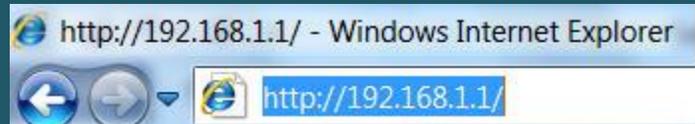

- You will be prompted to enter administrator password of modem: admin

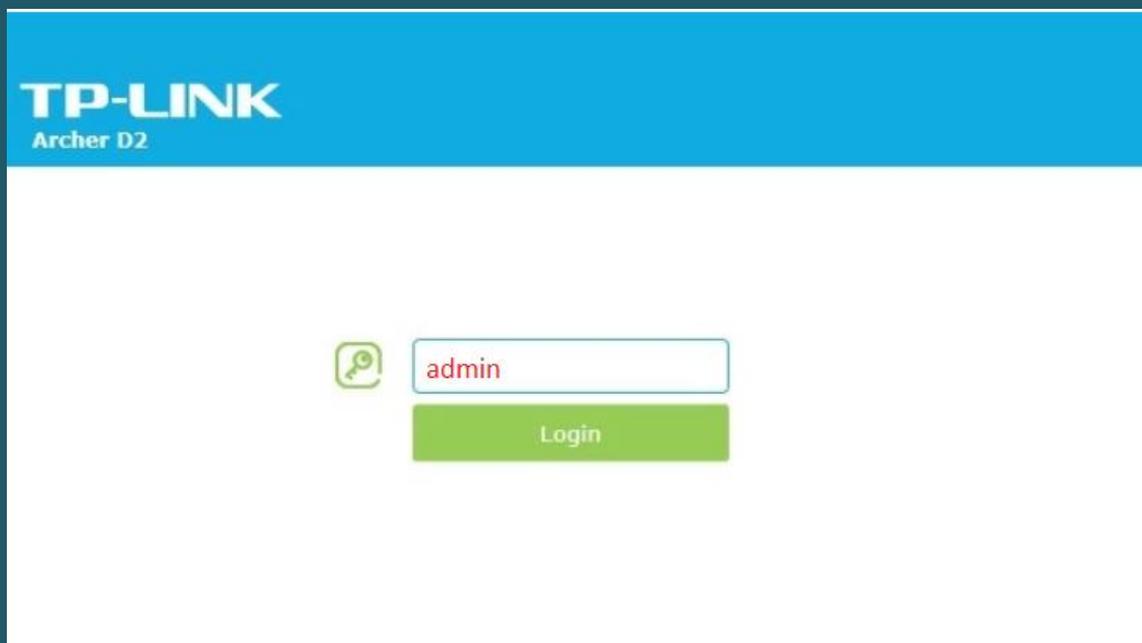

- To Modify Wireless Settings , click Basic then go to Wireless

**TP-LINK Archer D2** Quick Setup **Basic** Advanced Log out Reboot

Network Map Internet Wireless ← 2 Guest Network USB Settings Parental Controls IPTV

Internet Router 2.4GHz 5GHz

Wireless Clients 0 Wired Clients 0 Printer 0 USB Disk 0

**Internet**

Internet Status: Connecting  
Connection Type: Bridge

- In Wireless Settings page you can either enable and configure both Wireless Network 2.4 GHz and 5GHz or one of them
- In Wireless Network Name (SSID ) type Wi-Fi Name and in Password type Wi-Fi Password then click Save (safest passwords are long and contain at least 8 digits of mixed letters, and numbers)

**TP-LINK Archer D2** Quick Setup **Basic** Advanced Log out Reboot

Network Map Internet Wireless Internet Settings Guest Network USB Settings Parental Controls IPTV

### Wireless Settings

Wireless Network 2.4GHz:  Enable

Wireless Network Name (SSID): TP-LINK\_220A  Hide SSID

Password: 12345670

Wireless Network 5GHz:  Enable

Wireless Network Name (SSID): TP-LINK\_220A\_5G  Hide SSID

Password: 12345670

Save