


## Technicolor TG582n v2

- Establish a connection between the device and the router via network cable or Wi-Fi (default WIFI password is simply written on the bottom of the router.)
- Open any browser and type in the address bar 192.168.1.1
- You will be prompted to enter Username and password , Username is admin and Password is the Access Key which is written on the bottom label of the modem



- After signing in , go to Wireless Settings

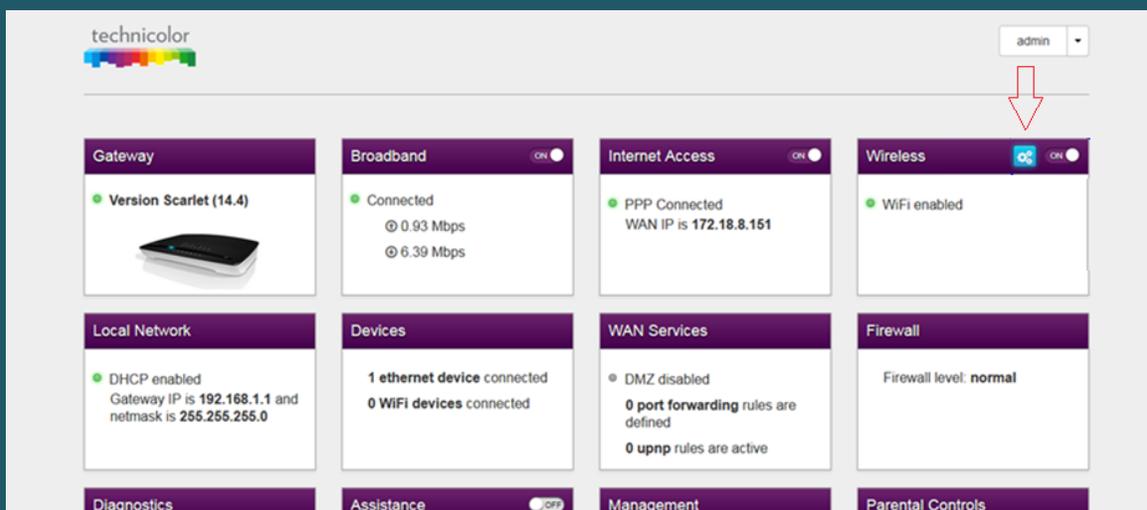

- Make sure Radio Enabled is on then scroll down to Access point
- In SSID Name type Wi-Fi name and select WPA2-PSK as Security Mode
- Type Wireless Password then click Close (safest passwords are long and contain at least 8 digits of mixed letters, and numbers )

The screenshot shows a 'Wireless' configuration page. At the top right, there is a 'show advanced' link. Below the title, the MAC address is 10.13.31.59.23.4b, the speed is 144.4Mbps, and the channel is set to 'Auto'. The current channel is 1. The 'Access Point' section contains the following fields: SSID name (TNCAP59234B), Security mode (WPA2 PSK), and Wireless Password (4AF4C1D70A). Below these fields, the WPS toggle is turned 'ON'. The WPS AP PIN code is 52396564. The WPS Device PIN code field is empty, with a 'Set PIN code' button next to it. The WPS PBC field has a 'Trigger' button. A red arrow points to a 'Close' button at the bottom center of the form.

Wireless show advanced

MAC address 10.13.31.59.23.4b

Speed 144.4Mbps

Channel Auto

Current channel 1

Access Point

SSID name TNCAP59234B

Security mode WPA2 PSK

Wireless Password 4AF4C1D70A

WPS

WPS AP PIN code 52396564

WPS Device PIN code  Set PIN code

WPS PBC Trigger

Close